




## End of work

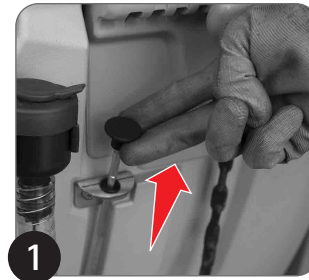

1 Close the tap

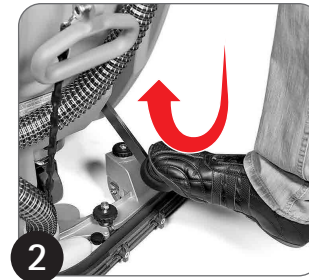

2 Lift the washing brush head

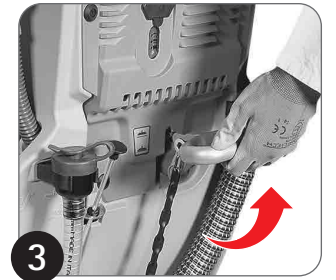

3 Lift the squeegee



4 Switch off the machine



5 Check the wear of the brush or pad



6 If the power level is low, put the machine on charge

## Use




1 Fill the machine with solution




2 Start the machine



3 Press the three buttons

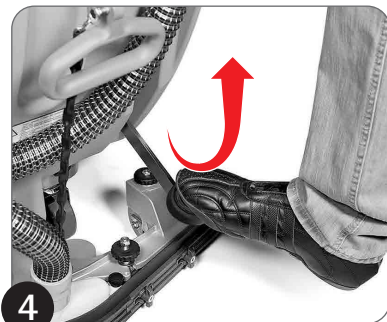

4 Lower the washing brush head

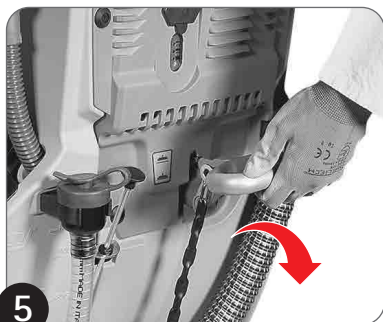

5 Lower the squeegee



6 Adjust the solution flow



7 Activate the brush command

## Daily maintenance



1 Empty the recovery tank



2 Clean the recovery tank




3 Check the condition of the float and the vacuum filter



4 Clean the vacuum duct



5 Clean the squeegee

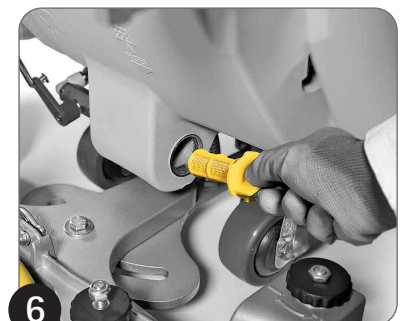

6 Clean the vacuum filter

## Troubleshooting

- **The machine will not start:** check battery connections, check the position of the general switch, check that the brush button has been pressed, check that the battery charger cable is unplugged.
- **The brush does not turn:** check that the brush button has been pressed, check that the brush head is lowered, check that the battery is not flat, check that the command levers have been fully pressed down.
- **The machine will not wash:** check the wear of the brush/disc, check the level of the solution in the tank, check that the tap is open, check that the solution filter is clean.
- **The machine will not vacuum:** check that the vacuum button is pressed, check that the squeegee is lowered, check that the vacuum and squeegee ducts are clean, check the wear of the rubber blade and if necessary turn, check the correct positioning of the carter and the vacuum hose, check that the recovery tank outlet cap is closed.
- **The battery charger is not charging the batteries:** check the battery connector, check that the power cord is connected, try using another power outlet, if you see flashes, read the battery charger manual.

**ATTENTION:** Before use, disconnect the battery charger and check the level of solution.

**ATTENTION:** do not use the machine in reverse with the squeegee lowered.