




End of work



1 Switch off the machine

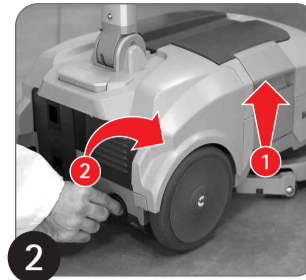

2 Lift up the squeegee



3 Empty the dirty water tank



4 Empty the clean water tank



5 Check the wearing of the brush or pad holder (**do it without tanks**)



6 If the battery level is low, put the machine on charge

Work




1 Fill clean water



2 Switch on the machine



3 Adjust the handle bar

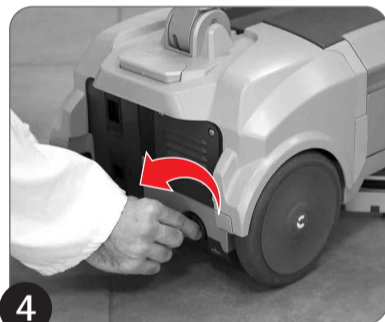


4 Lower the squeegee



5 Push the button AUTO



6 Press the brush/suction button

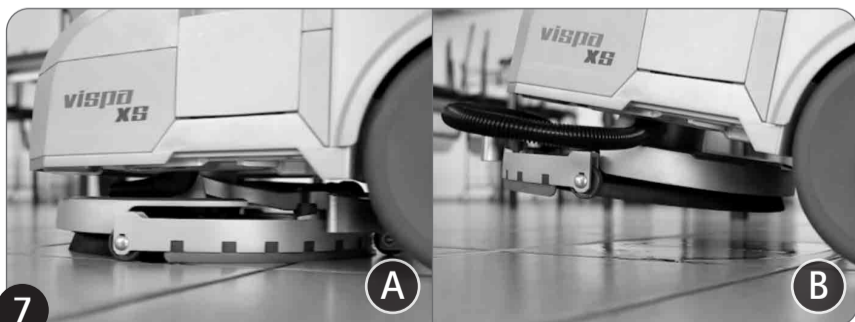

7 To dry moving backward lift up the front part of the machine.


Daily maintenance



1 Empty the dirty water tank



2 Clean the dirty water tank

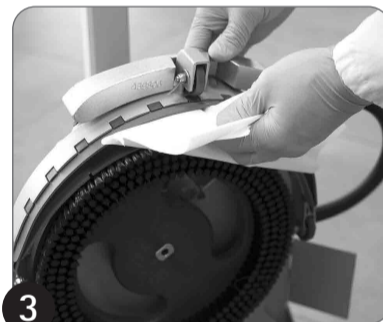

3 Clean the squeegee



4 Clean the suction hose



5 Clean the clean water filter

ATTENTION: all the operations must be done without tanks on the machine.

Troubleshooting

- **The machine doesn't turn on:** check the battery connections, check the foot switch is on.
- **The brush doesn't turn:** check the right installation of the brush, check the battery is not discharged, check the working lever on the handle.
- **The machine doesn't clean:** check the wearing of the brush/pad holder, check water level inside the tank, make sure that the solution filter is clean, check the right position of the tanks.
- **The machine doesn't dry:** check the suction button the handle, check the squeegee is down, make sure that the suction hoses and squeegee are clean, check the wearing of the squeegee blade and eventually turn it, check the right position of the carter and the suction hose.
- **The charger doesn't charge the battery:** check the right position of the battery, check that the switch of the battery charger is on position 1, check that the power cable is plugged in, check if there are blinking light and refer to the charger instructions book.

ATTENTION: before using the machine, check the water level and the battery charge level.

ATTENTION: the machine starts always in Eco Mode.