




Principle maintenance rules Abila 17/20/42/52/45/50

AT THE END OF THE WORK











- 2. Lift the brushes
- 3. Lift the squeegee4. Turn off the suction motor switch
- 5. Turn off the brush motor switch
- 7. Check the wear of the brushes or discs (to be replaced before the pad holder is being damaged)





Do not vacuum flammable products such as: alcohol, spirits, trichloroethylene, solvents, etc.

DAILY MAINTENANCE











1. Cleaning the recovery tank

Empty the tank using the hose, turning the knob a couple of times to loosen it and then removing the cap

2. The tank can also be removed to facilitate maintenance operations

Cleaning the recovery tank

Open the recovery tank lid and clean the tank with a water jet.

5. Cleaning the squeegee

Clean the squeegee with a jet of water and clean the lower part by hand

6. Cleaning the solution tank filters

With the solution tank **empty:**

- 1. Unscrew the filter
- 2. Clean the cartridge under a jet of water3. Rinse the tank with a jet of water.
- 4. Reassemble everything, repeating the above-mentioned operations in the reverse order

WEEKLY MAINTENANCE



1. Rear squeegee rubber

(if worn, change the dryer side; replace after all sides are worn)

2. Cleaning the suction hose

Drying is insufficient in case of obstruction of the suction hose. Clean it with a water jet introduced from the side where it is connected to the tank





3. Cleaning the suction motor filter Extract the suction motor float filter and clean it with a jet of water.






You should always wear protective gloves to avoid the risk of serious injury to hands

ADJUSTING THE SQUEEGEE



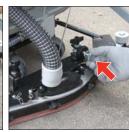

- . Adjust the wheel on the support so that the rubber is not too squashed to the ground, and the squeegee rests evenly on the ground
- 2. Adjust the inclination using the knob, so that the rubber has on the floor a uniform inclination in both sides and in the centre

LEAD BATTERY MANAGEMENT (TRACTION USE)





- The filling up must always be carried out after the battery charging (and before use)
- The filling up should be performed when necessary (i.e. when the electrolyte level drops below 15 mm above the line of the plaques)
- Never let the battery drop below 80% of the rated
- While charging, the lid of the body must be lifted, but the caps must remain closed
- Never perform partial charging: the charging cycle must be finished